


- *Cut out the pelmet face fabric in straight widths initially, turnings extra, and matching any pattern as required. Seam up the widths using an open seam, pressing the seams open with a cool iron.*

**Diagram 3**

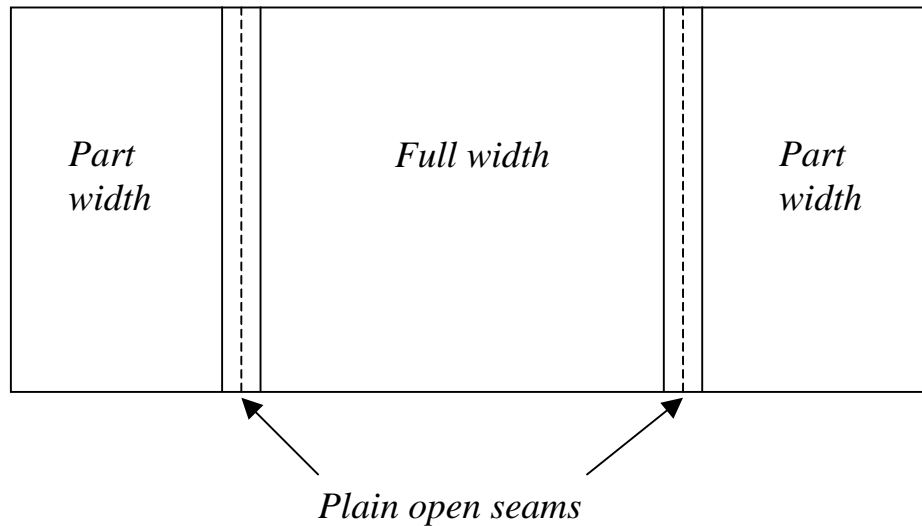

- *Now using the paper pattern, cut out the face fabric to the required shape. Remember to allow for the turnings extra, referring to the section on Estimation of Face Fabric.*
- *Lay the widths of face fabric out flat with wrong sides uppermost. Lay the buckram covered with the interlining on the top with the turnings of the face fabric showing all around. Starting in the centre, pin the face fabric to the reverse of the pelmet along the top edge. Place the pins at right angles to the buckram. See Diagram 4.*

**Diagram 4**

